

# EFS Teleset Re-Crediting Instructions



## Overview

Teleset re-crediting is the loading of postage from your FP Teleset account onto your franking machine. This involves the machine dialling up to the FP Teleset server via your analogue telephone line. The franking machine then requests the amount you have specified and transfers the funds securely to your EFS franking machine.

## Re-crediting requirements

As mentioned above, you require an analogue telephone line.

You must have funds available on your FP Teleset account ready for downloading.

You must download your postage funds in £10 increments. i.e. £10, £20, £50, £100.

(Re-crediting of £56 for example is not possible)

The minimum amount for download is £10.

The maximum amount for download is £9990.

 
## Loading a new amount



In some countries, only a fixed amount can be used. This function is disabled in these countries.



- Type in your 8 digit PIN, ("12345678" in the example) as shown on your TELESET card.



- Confirm entered PIN with the ENTER key.




You are now in the TELESET mode. The *LOADING* light will illuminate. In the display appears a "1" together with the last amount used to load your EFS franking machine (600 in the example).



- Enter new postage amount (300 in the example).



The permissible postage amounts (minimum/maximum/steps) are determined by your postal service.

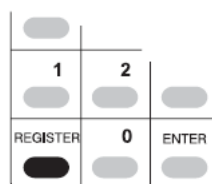

- Confirm the new value by pressing the REGISTER key. If an incorrect entry is made while in the TELESET mode, you can clear it with the C/CE key. To exit the TELESET mode completely, press the C/CE key a second time.