

# jetmail Teleset Re-Crediting Instructions


## Overview

Teleset re-crediting is the loading of postage from your FP Teleset account onto your franking machine. This involves the machine dialling up to the FP Teleset server via your analogue telephone line. The franking machine then requests the amount you have specified and transfers the funds securely to your jetmail franking machine.

## Re-crediting requirements

As mentioned above, you require an analogue telephone line.  
You must have funds available on your FP Teleset account ready for downloading.  
You must download your postage funds in £10 increments. i.e. £10, £20, £50, £100.  
(Re-crediting of £56 for example is not possible)  
The minimum amount for download is £10.  
The maximum amount for download is £9990.


*Loading postage* • In the READY MODE, press the **TELESET** key.

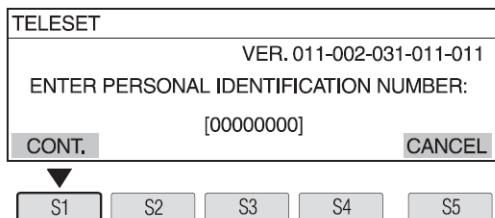

- Type in your 8 digit PIN as shown on your TELESET card. Entered PIN digits will appear in the Display as “\*”.
- Confirm your entry with the **S1** key.

JetMail opens the TELESET menu.

*TELESET menu*

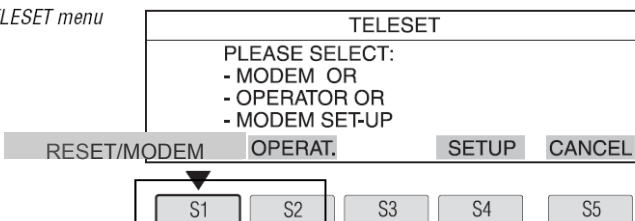


- Press the **S1** key for MODEM.
- Now follow the instructions in the display.

After confirming amount, the procedure runs automatically.

In case that JetMail will ask you to confirm the process again within 30 seconds by pressing the **S1** key.

If the transmission was successful, the display will show:

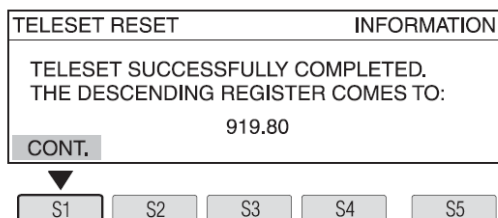

- Press the **S1** key to continue. JetMail returns to the TELESET menu.
- Press the **S5** key to exit the TELESET menu and return to the READY MODE.